

# PY32F040R1xT-EP-START V2

## User Guide



Puya Semiconductor (Shanghai) Co., Ltd

## Contents

1.	Introduction .....	3
2.	Functional pin assignment.....	4
3.	Overview of Hardware Design .....	5
3.1	Power Supply.....	5
3.2	I <sub>DD</sub> TEST .....	6
3.3	LED Indicator Light .....	6
3.4	Reset Key.....	7
3.5	User Key.....	7
3.6	Boot Mode Selection .....	8
3.7	External Clock Source.....	8
3.8	Programming and debugging:.....	9
4.	Guide to Using the Example .....	10
4.1	LED Example.....	10
4.2	KEY Example.....	10
4.3	FLASH Example.....	10
5.	Schematic .....	11
5.1	PY-LINK Schematic.....	11
5.2	MCU Schematic .....	12
6.	Updated History .....	13

## 1. Introduction

The PY32F040R1xT-EP-START V2 development board integrates a PY-LINK emulator. For detailed usage instructions of PY-LINK, please refer to the document "PY-LINK OB\_UserManual\_EN.pdf". The START board uses the PY32F040R1xT-EP as the main controller. This development board, equipped with a 32-bit ARM® Cortex®-M0+ CPU core from Puya, provides a simple hardware development environment. The board is powered via the USB interface of PY-LINK. It offers peripheral resources including extension pins, as well as SWD, Reset, User key, Reset key, LED, and more. This document provides detailed hardware schematics and related application examples.

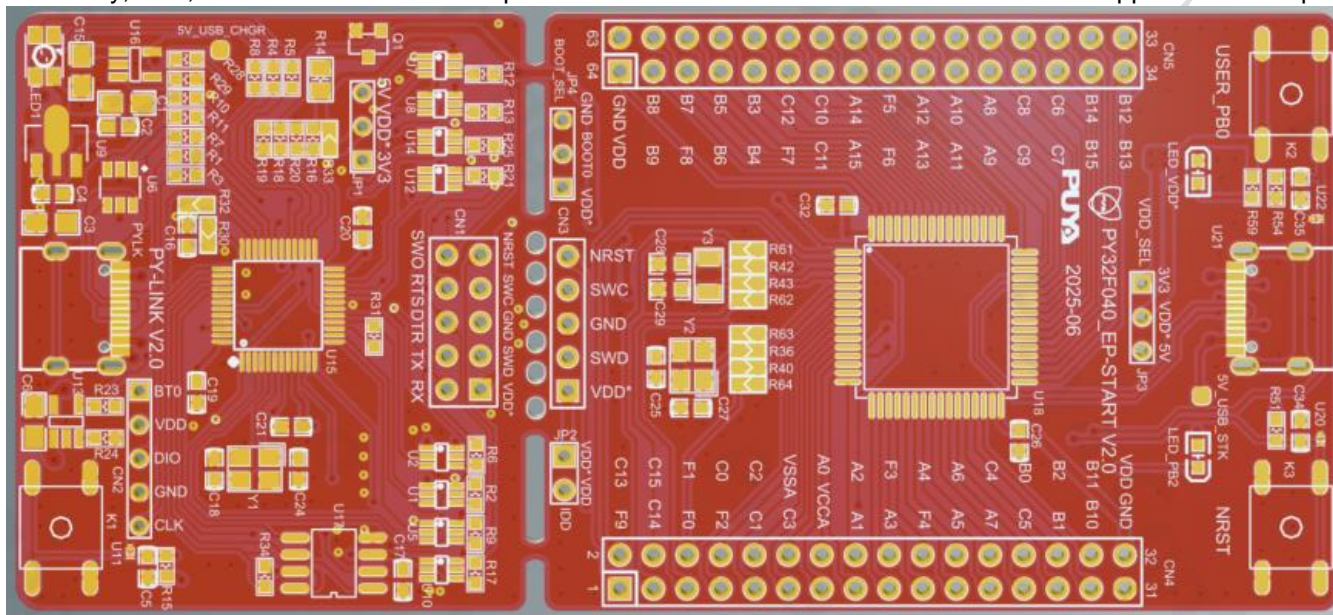


Figure 1-1 PCB 3D renderings

## 2. Functional pin assignment

Table 2-1 Pin Assignment

Function	Pin	Description	Note
LED	\	LED1	PY-LINK LED
	\	LED2	VDD*
	PA1	LED3	User LED
KEY	\	K1	PY-LINK Key
	PA0	K2	User Key
	PC0	K3	Reset Key
SPI	PA4	SPI_NSS	ExternalFLASH
	PB3	SPI_CLK	ExternalFLASH
	PB4	SPI_MISO	ExternalFLASH
	PB5	SPI_MOSI	ExternalFLASH

### 3. Overview of Hardware Design

The development board is powered via a Type-C USB connection. To download programs to the board, a Type-C USB cable is required. Select the correct boot mode, connect the USB cable, and if LED1 lights up, it indicates a proper power connection.

#### 3.1 Power Supply

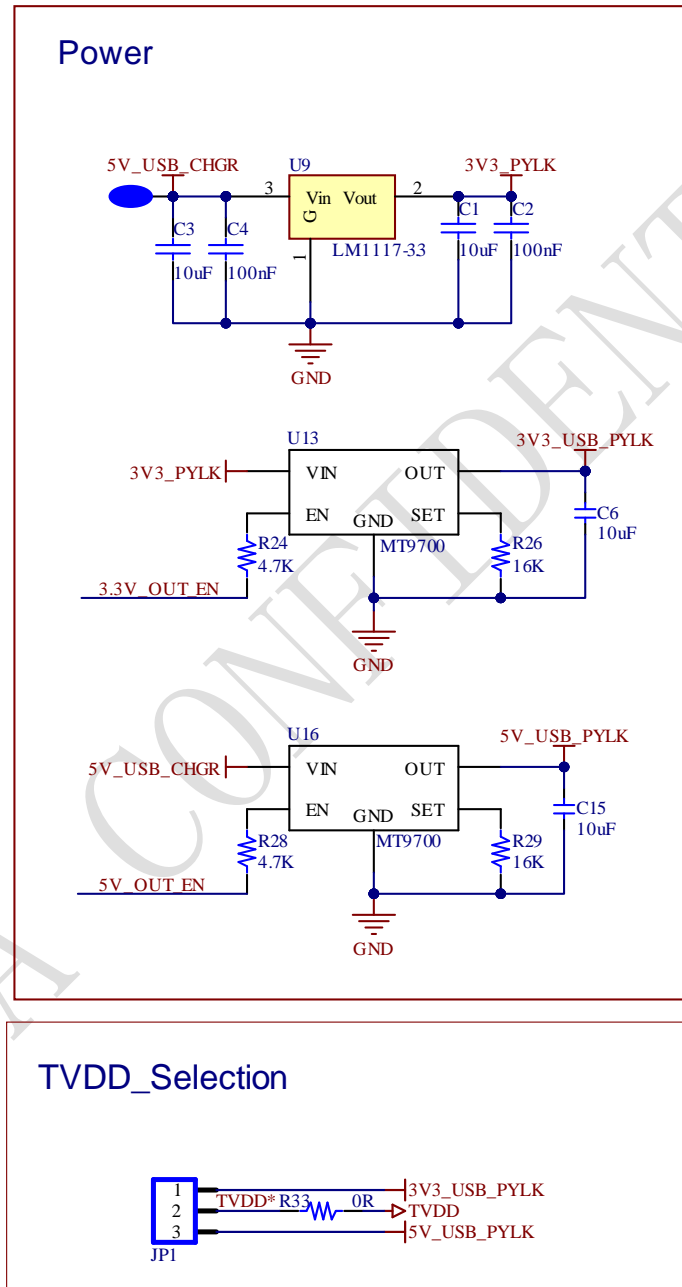


Figure 3-1 Power Supply Schematic

### 3.2 I<sub>DD</sub> TEST

When JP2 OFF (symbol IDD) and R58 OFF, an ammeter can be connected to measure the power consumption of MCU.

**JP2 OFF, R58 ON:** MCU is powered. (Default setting and JP2 plug is not mounted before shipping)

**JP2 ON, R58 OFF:** MCU is powered.

**JP2 OFF, R58 OFF:** An ammeter must be connected. If there is no ammeter available, the MCU cannot be powered.

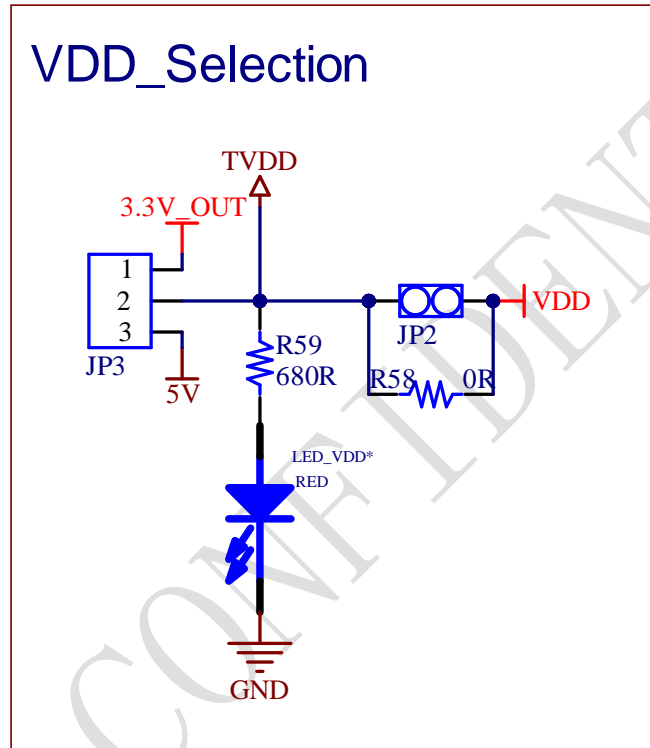


Figure 3-2 I<sub>DD</sub> Schematic

### 3.3 LED Indicator Light

The red LED indicates that the board TVDD is powered as shown in the figure above; The green LED is the user LED connected to the PB2 pin of the MCU.

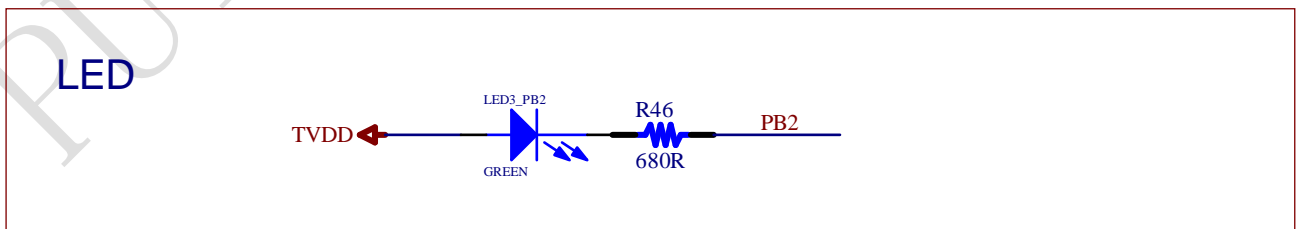


Figure 3-3 LED Schematic

### 3.4 Reset Key

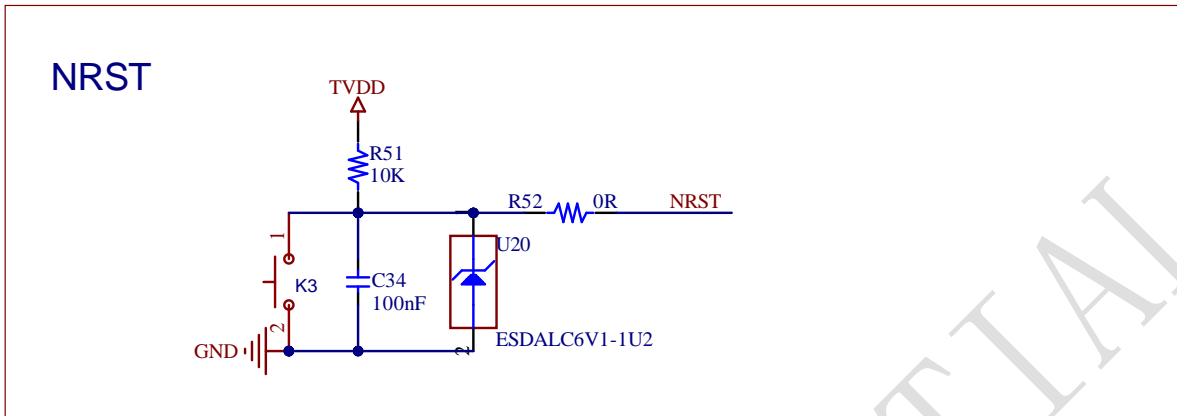


Figure 3-4 Reset Key Schematic

### 3.5 User Key

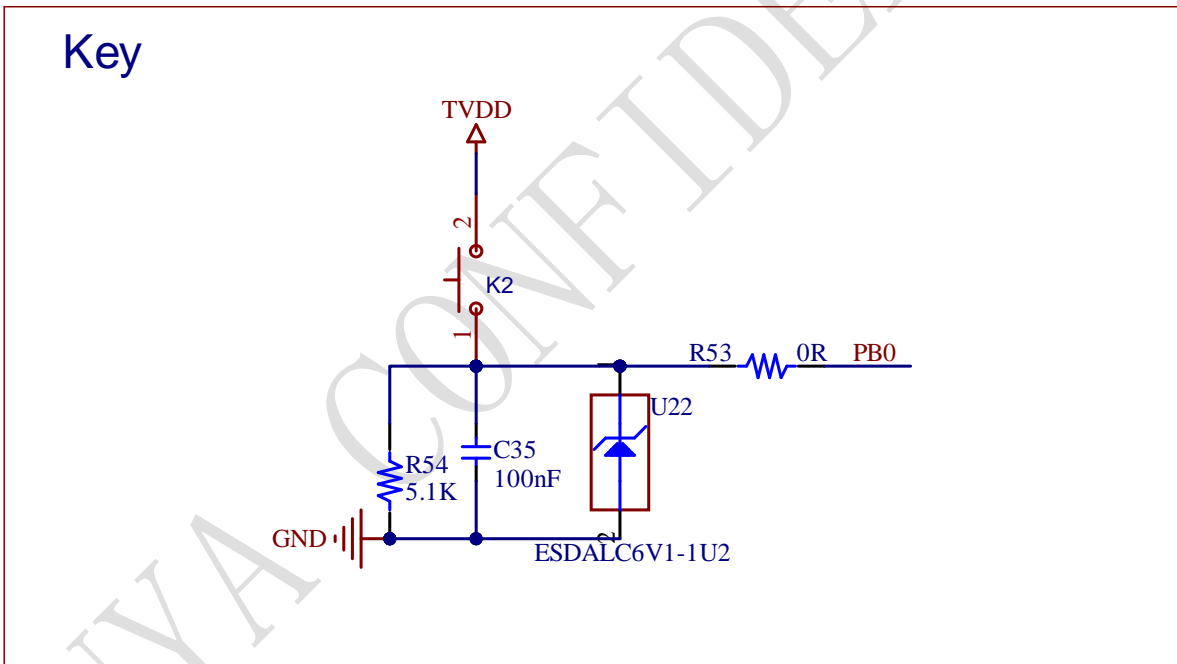


Figure 3-5 User Key Schematic

### 3.6 Boot Mode Selection

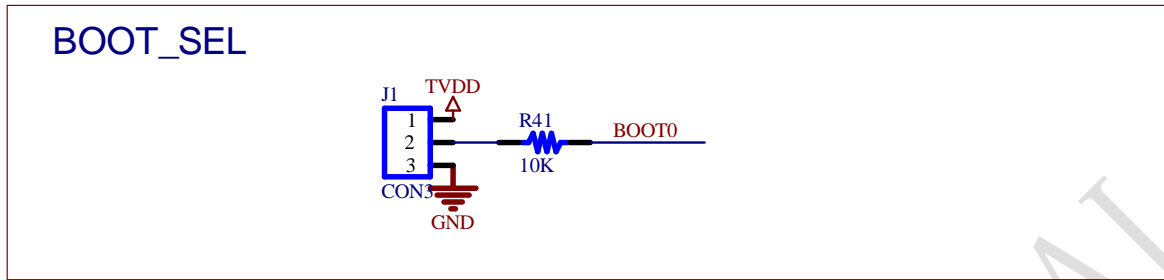


Figure 3-5 BOOT Mode Schematic

Three different boot mode can be selected through the BOOT0 pin and boot selector option bit nBOOT1 (stored in the Option bytes), as shown in the following table:

Table 3-6 Boot configuration

Boot mode configuration		Mode
nBOOT1 bit	BOOT0 pin	
X	0	Boot from Main flash
1	1	Boot from System memory
0	1	Boot from SRAM

### 3.7 External Clock Source

#### HSE clock source

There are three methods to configure the external low-speed clock sources by hardware:

##### On-board crystal (Factory default setting):

On-board 24 MHz crystal is used as HSE clock source.

##### Oscillator from external PF0:

External oscillator is injected from the PF0 of CN4. The hardware must be configured: R36 OFF.

##### HSE unused

MCU PF0 and PF1 are used as GPIOs.

#### LSE clock source

There are three methods to configure the external low-speed clock sources by hardware:

##### On-board crystal (Factory default setting):

On-board 32.768 kHz crystal is used as HSE clock source.

##### Oscillator from external PC14:

External oscillator is injected from the PC14 of CN4. The hardware must be configured: R42 OFF.

##### LSE unused

MCU PC14 and PC15 are used as GPIOs.



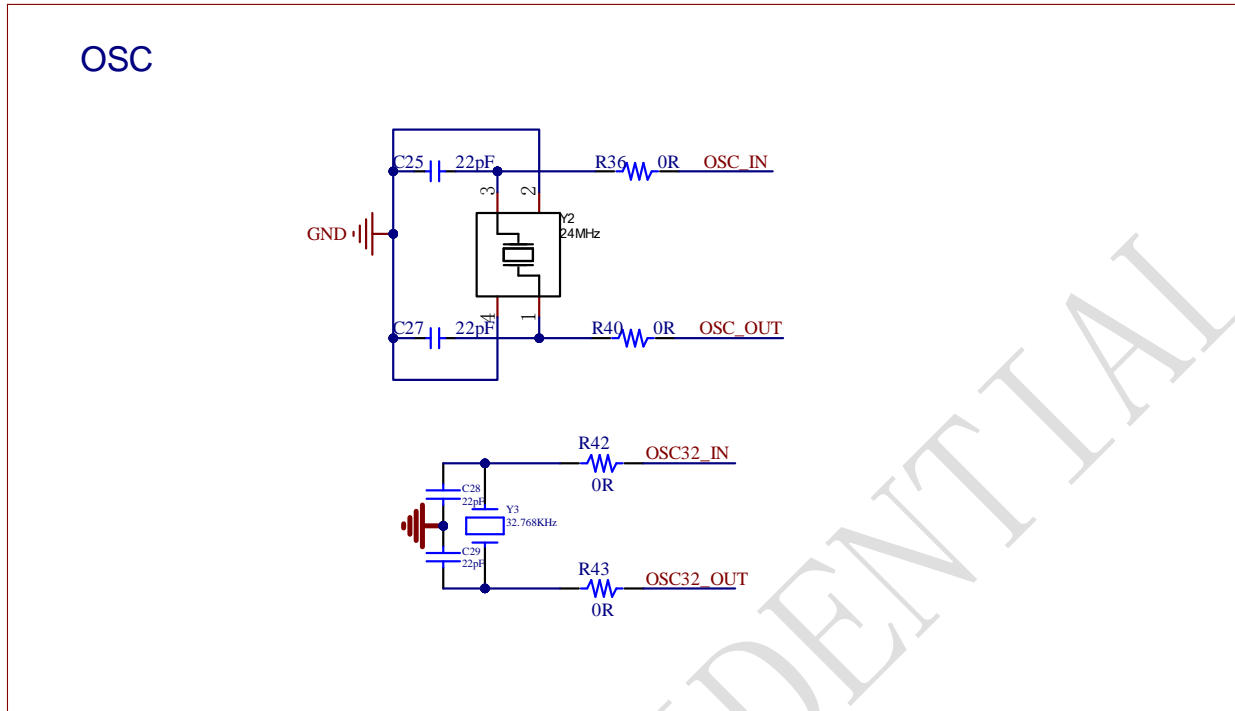


Figure 3-8 Clock source function schematic

### 3.8 Programming and debugging:

The evaluation board integrates PY-LINK for users to program/debug the PY32F040R1xT-EP on the PY32F040R1xT-EP-START V2 board. PY-LINK supports SWD interface mode, and supports a set of virtual serial ports (VCP) and PY32F040R1xT-EP's USART1\_TX/USART1\_RX (PA9/PA10) to connect and communicate through Dupont wire, please refer <USART> to the official PY32xxxx\_Firmware Example. For more information about PY-LINK operation, firmware upgrade, and precautions, please refer to the "PY-LINK OB\_UserManual\_EN.pdf" document. The PY-LINK on board can be disassembled or separated from the PY32F040R1xT-EP-START V2. In this case, the PY32F040R1xT-EP-START V2 can still be connected to the CN1 interface of PY-LINK through CN3 interface (not mounted before leaving factory), or to another PY-LINK, in order to continue to program and debug the PY32F040R1xT-EP.

## 4. Guide to Using the Example

### 4.1 LED Example

#### Purpose of the Example

There is one LED on the development board, the LED is controlled by GPIO. This sample program will tell how to light up the LED.

#### Execution Results

Download the official PY32xxxx\_Firmware Example <GPIO\_Toggle>to the board, reset and run, and the green LED flashes.

### 4.2 KEY Example

#### Purpose of the Example

There is 1 user button on the board. The user key is detected by the GPIO. This routine will show you how to detect a key with an external interrupt.

#### Execution Results

Download the official PY32xxxx\_Firmware Example <EXTI\_IT>to the board, reset and run, press the button once, and the green LED will switch to the on-off state once.


### 4.3 FLASH Example

#### Purpose of the Example

There is a flash on the development board, and the FLASH communication interface is connected to the SPI interface. This example will show you how to read and write FLASH via SPI.

#### Note:

1. To use this routine, the user needs to weld the 0R resistor at the position of R44, R47, R48, R49, and R50 by himself, and the specific position needs to be welded as shown in the figure below.
2. The maximum working voltage of FLASH is 3.6V. It is recommended that the supply voltage of TVDD should not exceed 3.3V.

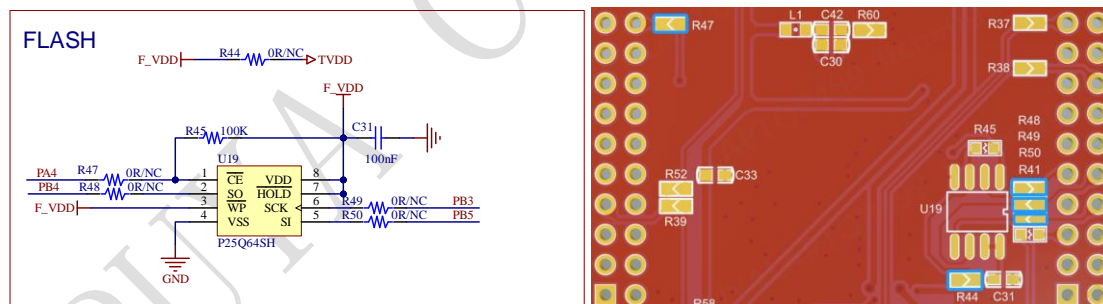

#### Execution Results

Download the official PY32xxxx\_Firmware Example < SPI\_FullDuplex\_ExternalFLASH >to the board, reset and run, If the green LED is always on, the FLASH read and write is successful, otherwise the FLASH read and write fails.

## 5. Schematic

### 5.1 PY-LINK Schematic

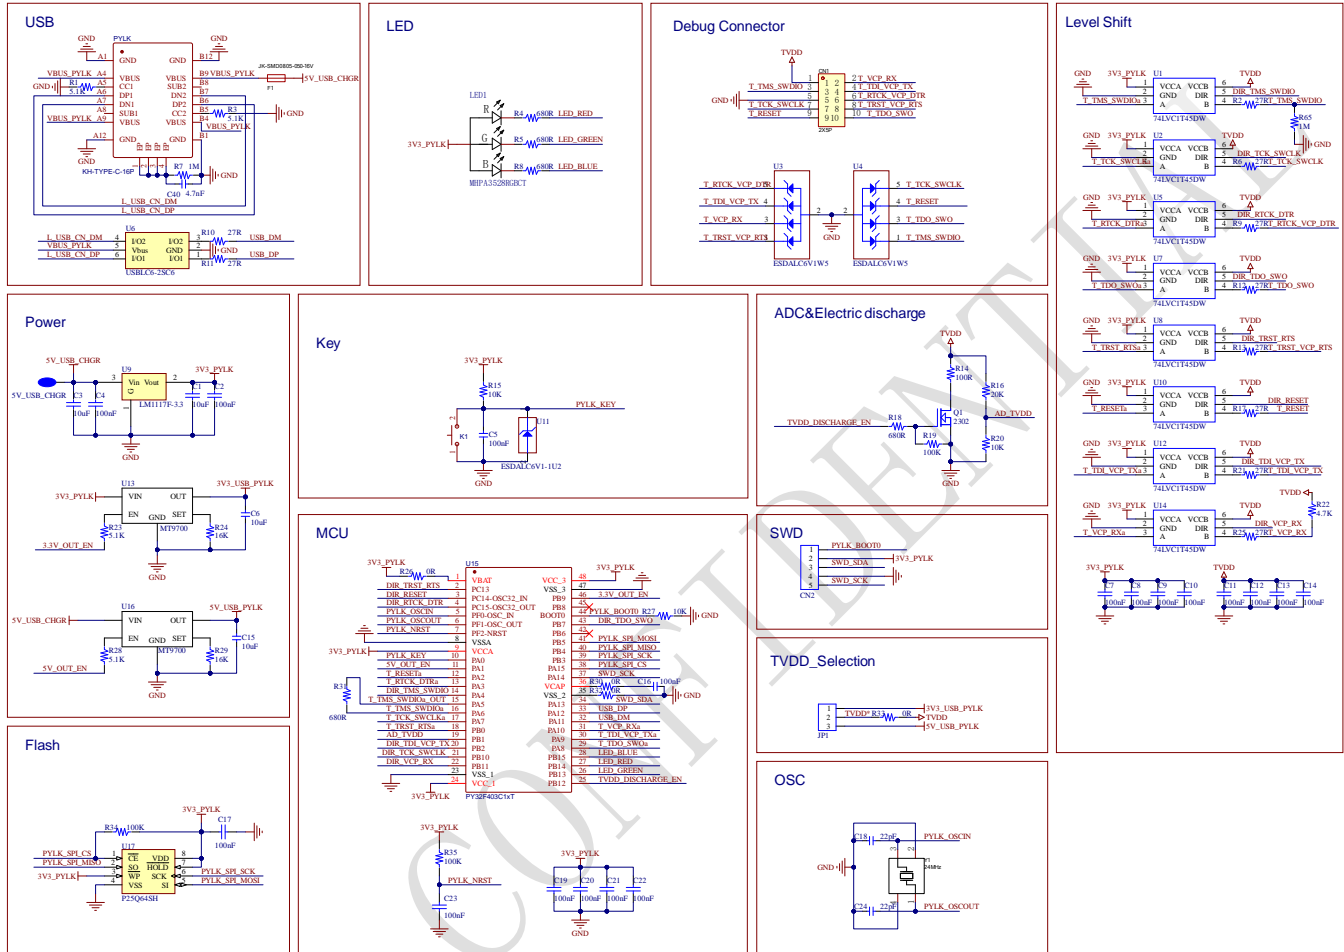


Figure 5-1 PY-LINK Schematic

## 5.2 MCU Schematic

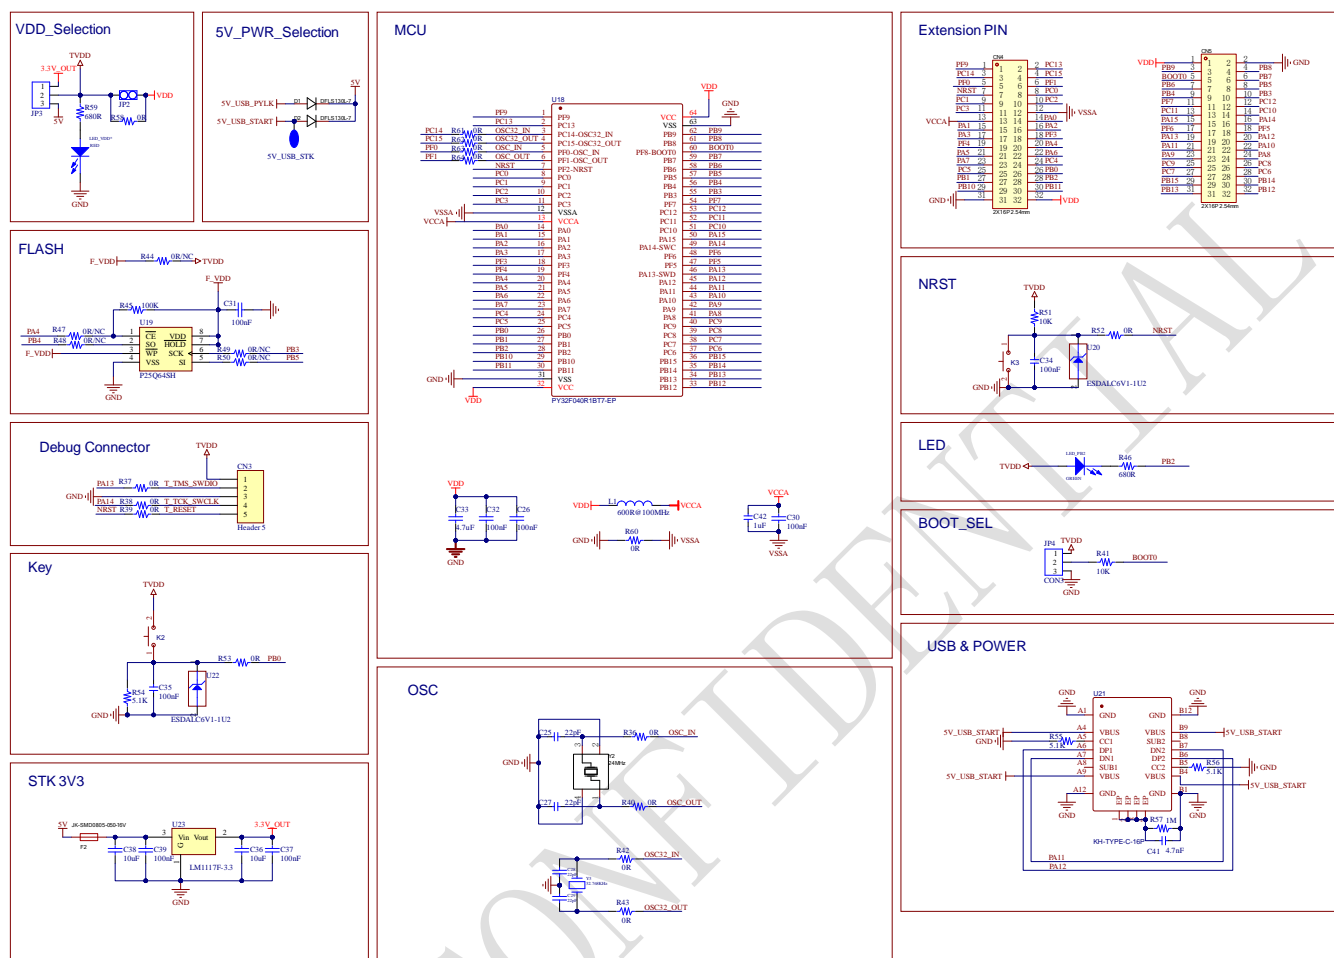


Figure 5-2 MCU Schematic

## 6. Updated History

Version	Content	Date
V1.0	Initial version	2025/06/30



Puya Semiconductor Co., Ltd.

### IMPORTANT NOTICE

Puya reserve the right to make changes, corrections, enhancements, modifications to Puya products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information of Puya products before placing orders.

Puya products are sold pursuant to terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice and use of Puya products. Puya does not provide service support and assumes no responsibility when products that are used on its own or designated third party products.

Puya hereby disclaims any license to any intellectual property rights, express or implied.

Resale of Puya products with provisions inconsistent with the information set forth herein shall void any warranty granted by Puya.

Any with Puya or Puya logo are trademarks of Puya. All other product or service names are the property of their respective owners.

The information in this document supersedes and replaces the information in the previous version.

Puya Semiconductor Co., Ltd. – All rights reserved